


Please follow these instructions for easy assembly.

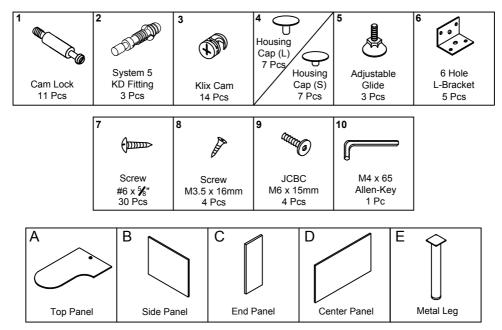

KLIX CAM INSTRUCTIONS

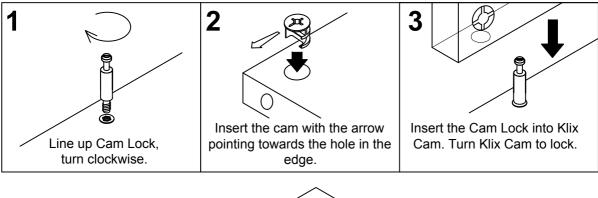


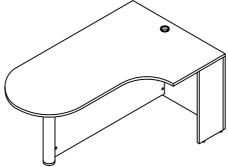

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

PL 133 L/R ATMGG PORK CHOP BULLET

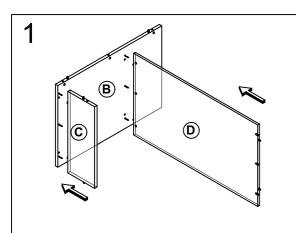

Attach the Center Panel (D) and End

Panel (C) to Side Panel (B) by using

Cam Lock (1) and Klix Cam (3).

