PL 208 OH / PL 209 OH
36" / 30" Open Hutch

Please follow these instructions for easy assembly.

1	2	3	4	5	6
 Cam Lock 12 Pcs	Klix Cam 12 Pcs	Housing Cap (Long) 8 Pcs	Housing Cap (Short) 4 Pcs	Pan Head Screw M9 x 25mm 6 Pcs	M4 Allen Key 1 Pc

A	B	C	D	E
 Top Panel	 Side Panel x 2	 Bottom Panel	Back Panel	Wall Cleat

KLIX CAM INSTRUCTIONS

1	2	3
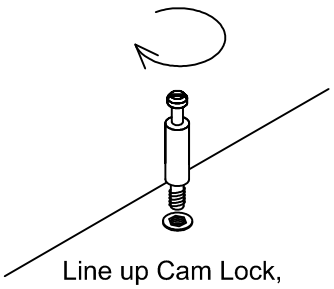 Line up Cam Lock, turn clockwise.	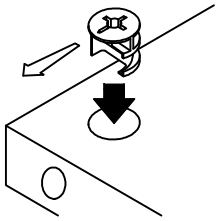 Insert the cam with the arrow pointing towards the hole in the edge.	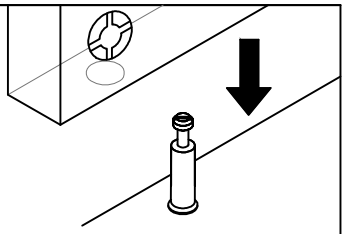 Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.

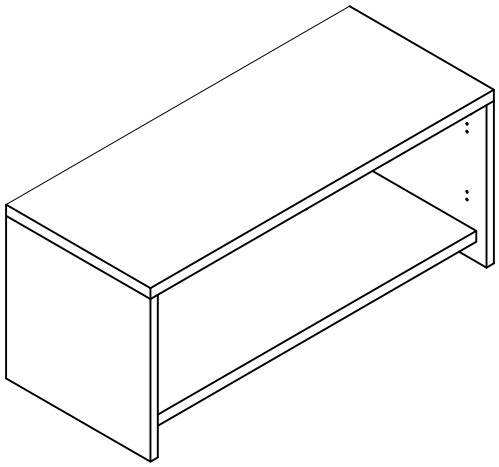

IMPORTANT !!

- **Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.**
- **Check that you have all parts and hardware.**
- **Remove all wrapping materials, including staples & packing straps before you start to assemble.**
- **Do not tighten any screws or bolts until the unit is completely assembled.**
- **Keep all hardware parts out of reach of children.**

1

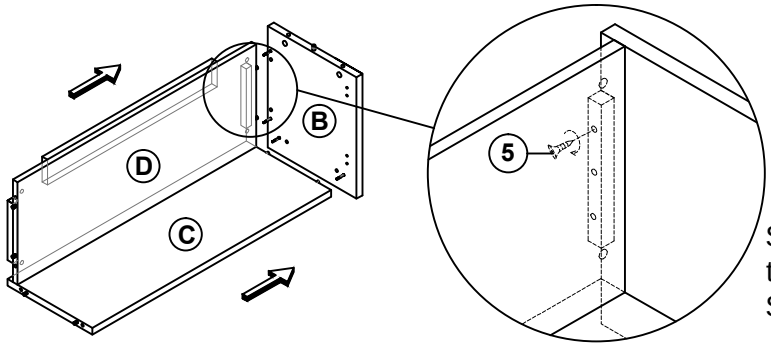

Secure the Back Panel(D) to Side Panel(B) by using Screw(5).

Attach the Back Panel(D) and Bottom Panel(C) to Side Panel(B) by using Cam Lock (1) and Klix Cam (2).

2

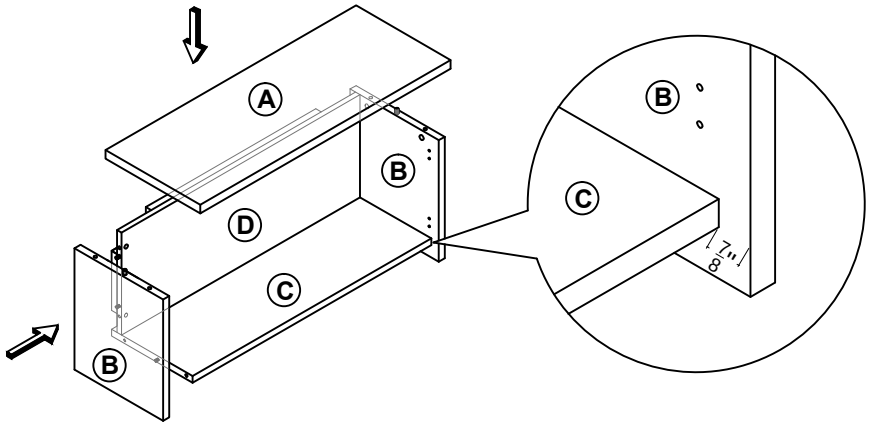

NOTE :
MUST have a gap of $\frac{7}{8}$" from side panel inward .

Attach another Side Panel(B) to Back Panel(D) and Bottom Panel(C) and then attach the Top Panel(A) by using Cam Lock (1) and Klix Cam (2).

3

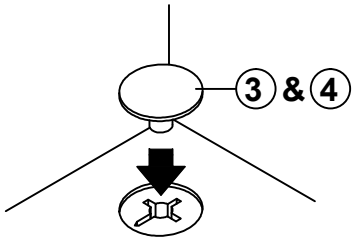

Attach Housing Cap(3 or 4) to all Klix Cams(B) by pushing neck through center of cam.