OfficeSource® ASSEMBLY INSTRUCTIONS

MODEL: PL2044OH

OPEN HUTCH - WALL MOUNT

HARDWARE:

1	2	3	4	5	6	7
Cam Lock 22 Pcs	Klix Cam 22 Pcs	Housing Cap (Long) 18 Pcs	Housing Cap (Short) 4 Pcs	Pan Head Screw M9 x 25mm 14 Pcs	M4 Allen Key 1 Pc	Ø5mm Hole Plug 16 Pcs

COMPONENTS:

A	B	C	D	E	F
 Top Panel	 Side Panel x 2	 Center Panel x 2	 Bottom Panel	Back Panel	Wall Cleat

KLIX CAM INSTRUCTIONS

1	2	3
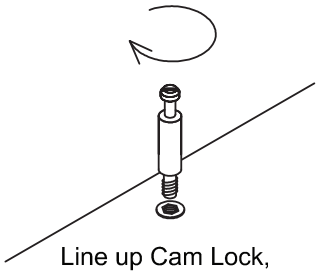 Line up Cam Lock, turn clockwise.	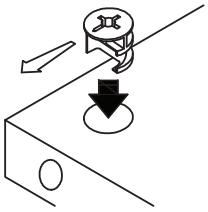 Insert the cam with the arrow pointing towards the hole in the edge.	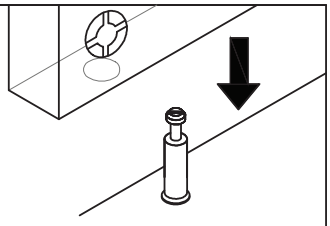 Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.

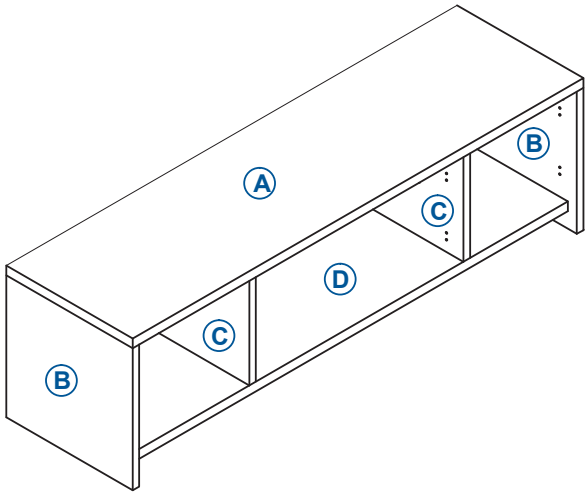

IMPORTANT :

- **Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.**
- **Check that you have all parts and hardware.**
- **Remove all wrapping materials, including staples & packing straps before you start to assemble.**
- **Do not tighten any screws or bolts until the unit is completely assembled.**
- **Keep all hardware parts out of reach of children.**
- **Please ensure that at least 4 of 12 screws that mount the cleat to the wall, are screwed into wall studs.**

OfficeSource® ASSEMBLY INSTRUCTIONS

MODEL: PL2044OH

OPEN HUTCH - WALL MOUNT

1

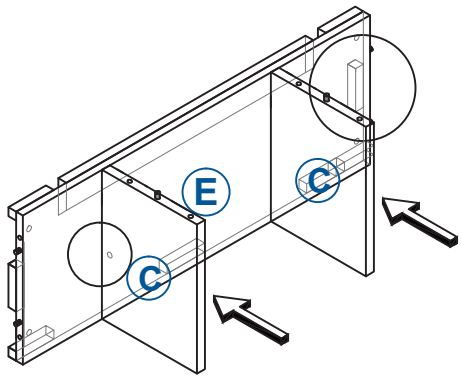

Attach the Back Panel(E) to Center Panels(C) by using Cam Lock (1) and Klix Cam (2).

2

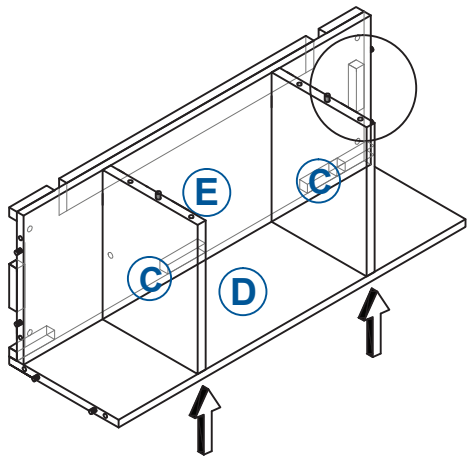

Attach the Bottom Panel(D) to Center Panels(C) by using Cam Lock (1) and Klix Cam (2).

3

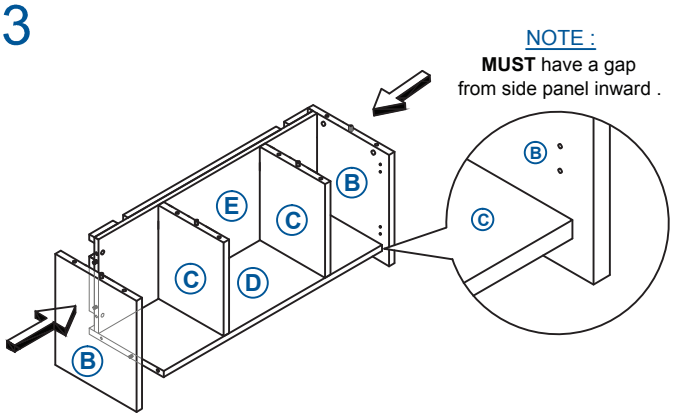

Attach Side Panels(B) to Back Panel(E) and Bottom Panel(D) by using Cam Lock (1) and Klix Cam (2).

4

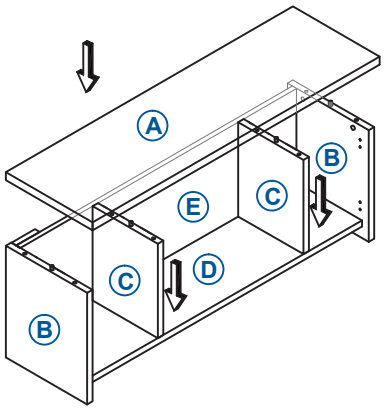

Attach Top Panel(A) to Side Panels(B) and Center Panels(C) by using Cam Lock (1) and Klix Cam (2).

5

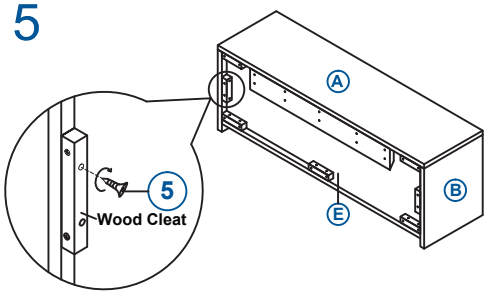

Secure the Back Panel(E) Wood Cleat to Side Panel(B), Bottom Panel(D) and Top Panel(A) by using Screws(5).

6

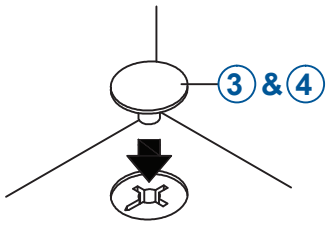

Attach Housing Cap(3 or 4) to all Klix Cams(B) by pushing neck through center of cam.

6

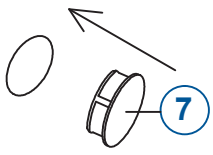

Insert the Hole Plug (7) into all drilled hole of the Side Panels (B) and Center Vertical Panels (C).